


Roll Splitter Attachment

The Accu-Cut Roll Splitter provides a simple yet effective tool for splitting carpet and vinyl on your Accu-Cut Cut & Roll Machine. Detailed below are specifications for assembling and operating the Roll Splitter. Should you have any questions concerning your roll splitter please call 1-800-ACCUCUT.

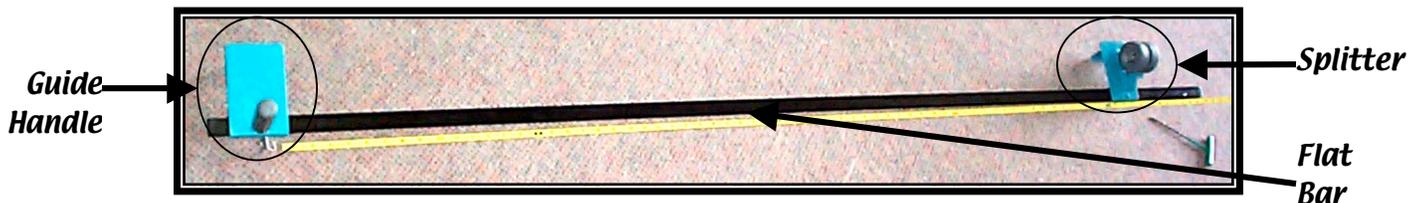

ASSEMBLY

1. Slide the guide handle onto the flat bar and secure in place by turning the handle.
2. Slide the splitter onto the flat bar ensuring the splitter is facing the same direction as the guide handle.

OPERATION

1. Using a tape measure, position the splitter so the material will be cut to the desired width. Secure the splitter in place by tightening the set screw.
2. Insert the tabs on the guide handle and the splitter into the cutting track positioning the guide handle on the outside edge of the material to be cut.
3. Advance the material to roll splitter and pull on the material for the first few feet - if your machine is equipped with variable speed control set the speed at the lowest setting.
4. Continue advancing the material into the roll-up cradle keeping the outside edge of the material flush with the guide handle.
5. Note: If you are measuring the piece you are splitting reset your counter to zero when the material is centered with the cutting track.

